


# Adjustable Rotary Nozzle

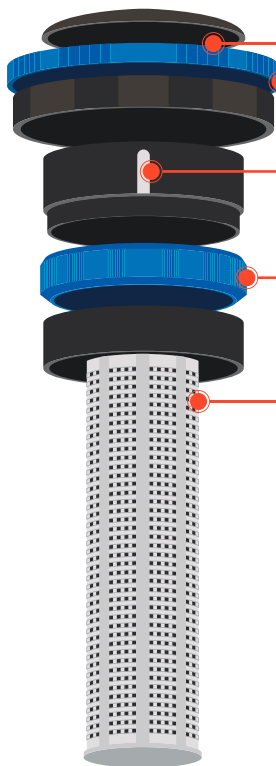

## RIGHT ADJUSTMENT ARROW

\*ADJUSTMENT RING TOP VIEW



ADJUSTMENT RING

FIXED LEFT START INDICATOR

FLOW CONTROL RING

FILTER

## SPECIFICATIONS:

### RANGE:

- 13' - 15' Adjustable 80° - 360°
- 16' - 19' Adjustable 80° - 360°
- 26' - 30' Adjustable 80° - 360°

### PRESSURE RATING:

30 - 50 PSI

### PRECIPITATION RATE:

.5 to .58 in/hr


### \*NOTE:

Data represents test results in zero wind.  
Adjust for local conditions.

# Adjusting the Arc


P/N: KR-RA5123

1

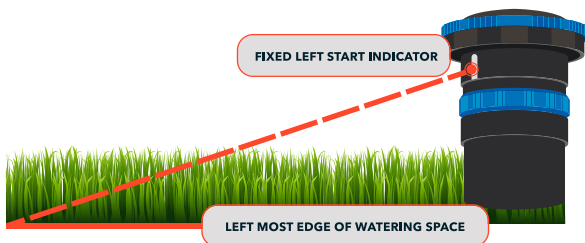



Position the white left-start indicator to the left-most edge of the space you want to water.

2

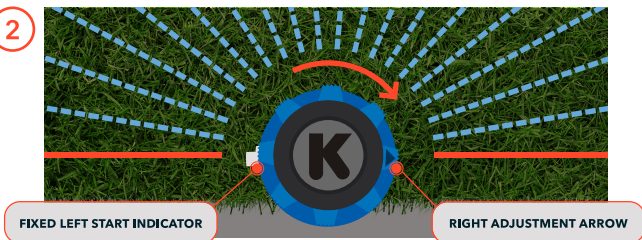

Rotate the ring with the right adjustment arrow to the right-most edge of this space. The rotary nozzle will apply streams of water between the left indicator and right adjustment arrow.

3

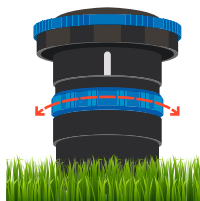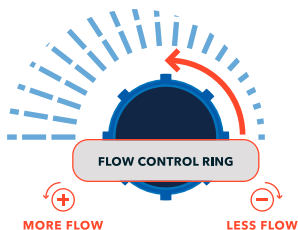

Fine-tune the length of the spray by adjusting the Flow Control Ring. Turn this ring counter clockwise for up to 20% more flow, or clockwise for up to 20% less flow.