



Installation Instructions

1. Find Top of Sprinkler Head in yard or bed area
2. Remove dirt to top of sprinkler head
3. Lift riser and unscrew nozzle
4. Thread on riser extension
5. Add KAP-IT body over riser
6. Snap onto top of sprinkler body
7. Put on nozzle
8. Turn riser clockwise to align
9. Adjust nozzle and test

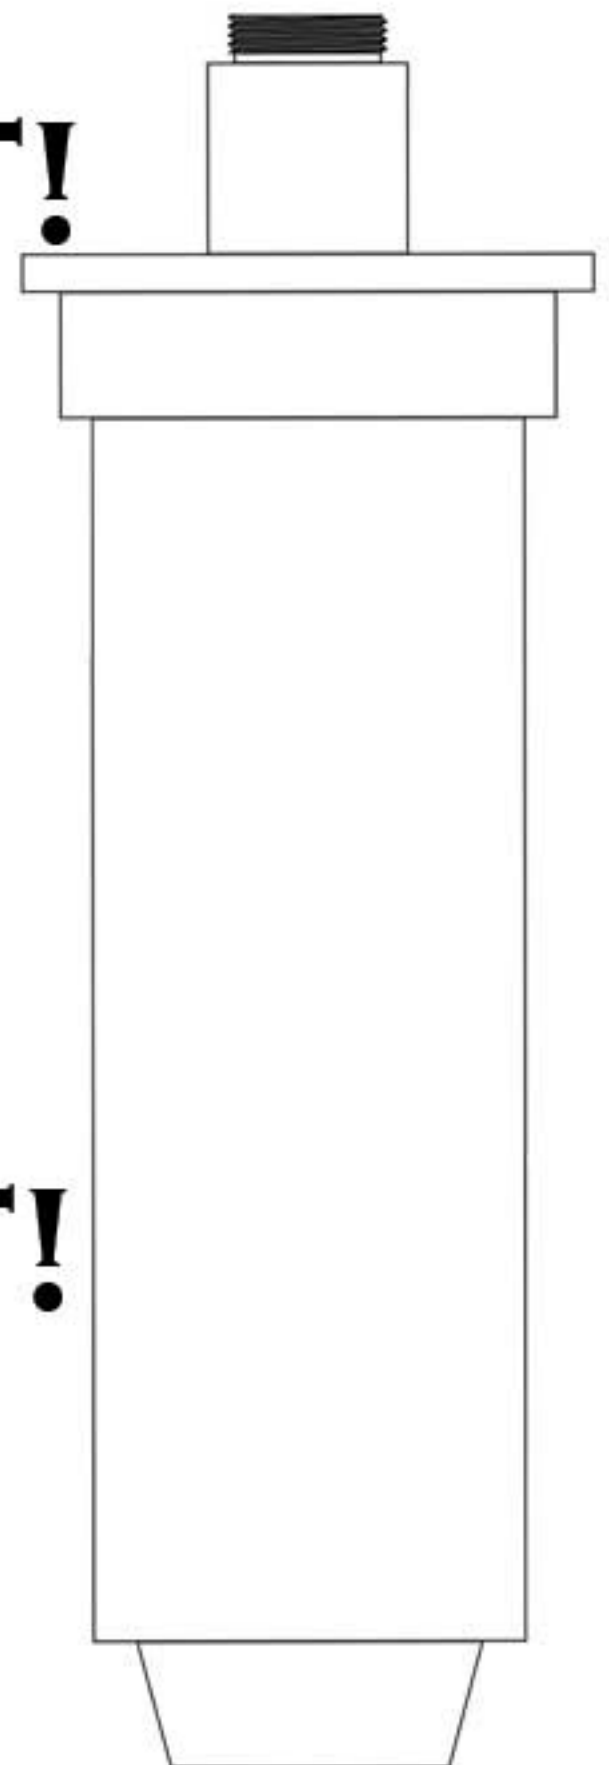

DON'T DIG IT!
KAP-IT!
SNAP-IT!
LIFT-IT!
RAISE-IT!
SPRINKLE-IT!

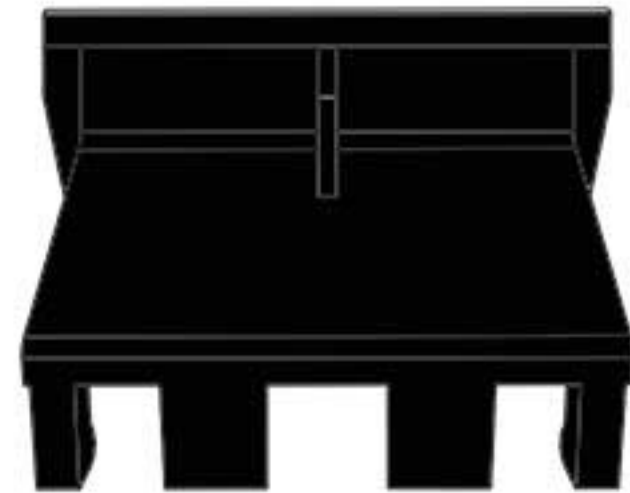

 **MADE IN AMERICA**